

acrobat mini

installation instruction

1

8-9/16" 15" 2-3/10"

housing

IC

AT

8-9/16" 15" 3-7/16"

housing

IC

AT

8-9/16" 15-7/10" 2-3/10"

housing

NIC


2-9/16" 9-11/16" 2-1/8"

remodel

IJB



Install the appropriate IC/driver box.

2

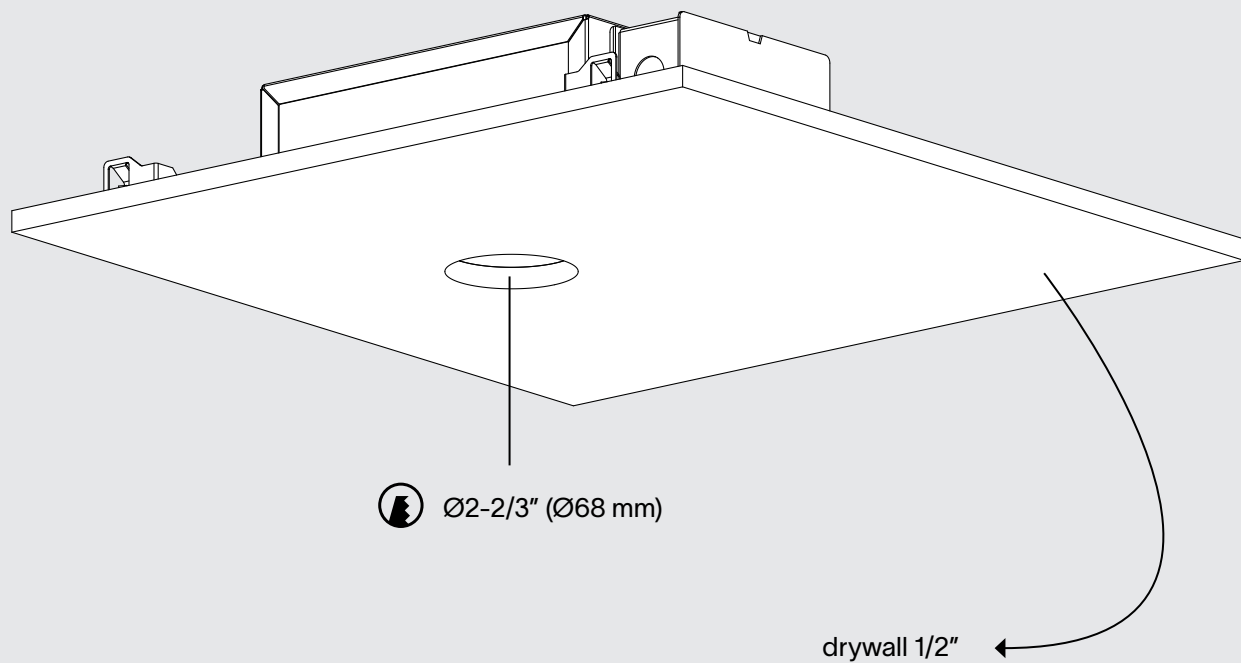

Install the drywall (thickness 1/2") with a round hole (Ø2-2/3").


3

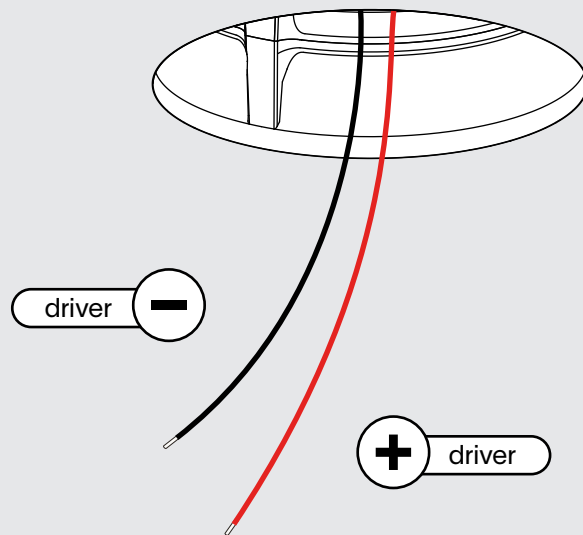**POWER
OFF****3/8"**

14 - 28 AWG


See packaging or fixture label for max. current.

4

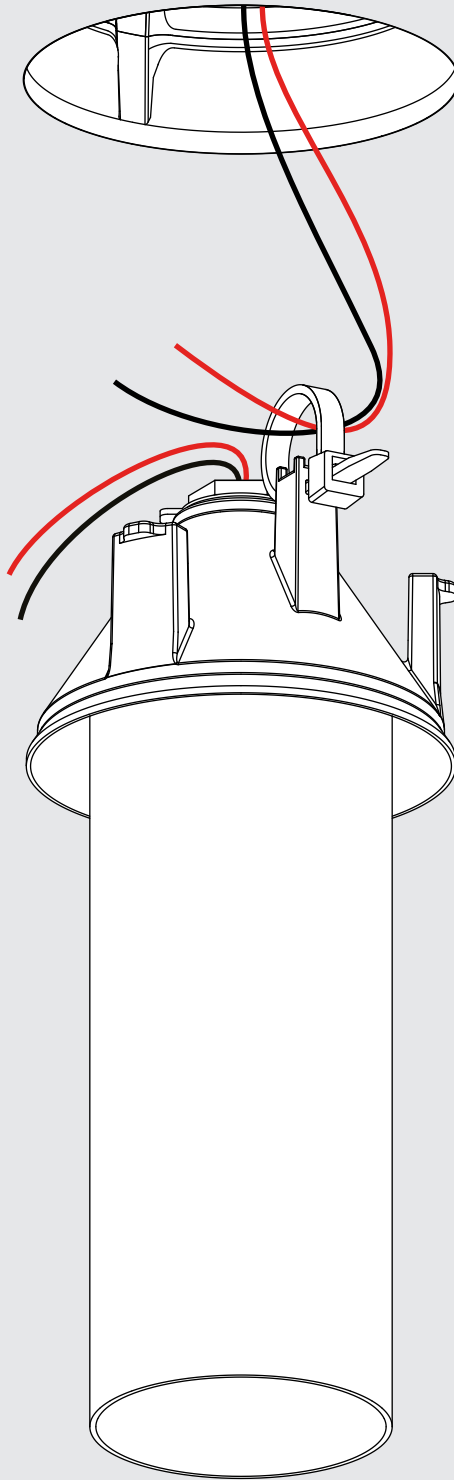


Pull the wires, coming from the ceiling, through the strain relief and tighten these.

5

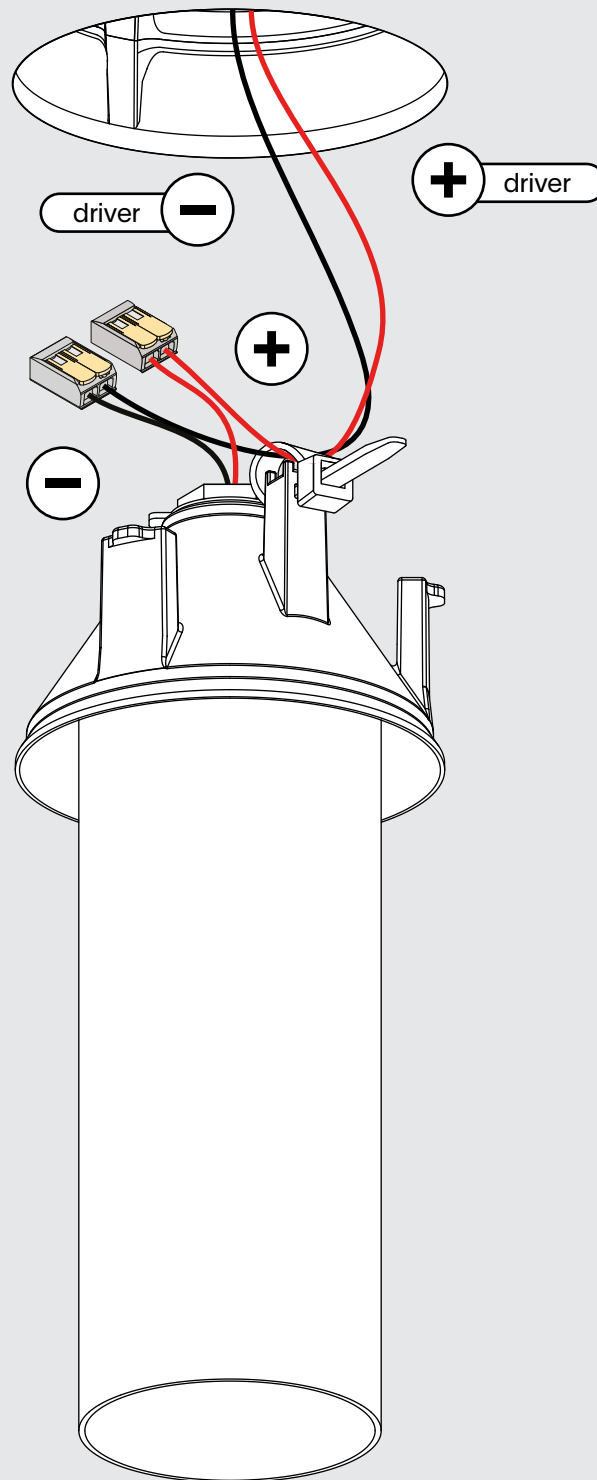


Connect the wires with wago connectors. For serial connection, respect polarity. Combine with a prado LED-driver.


6

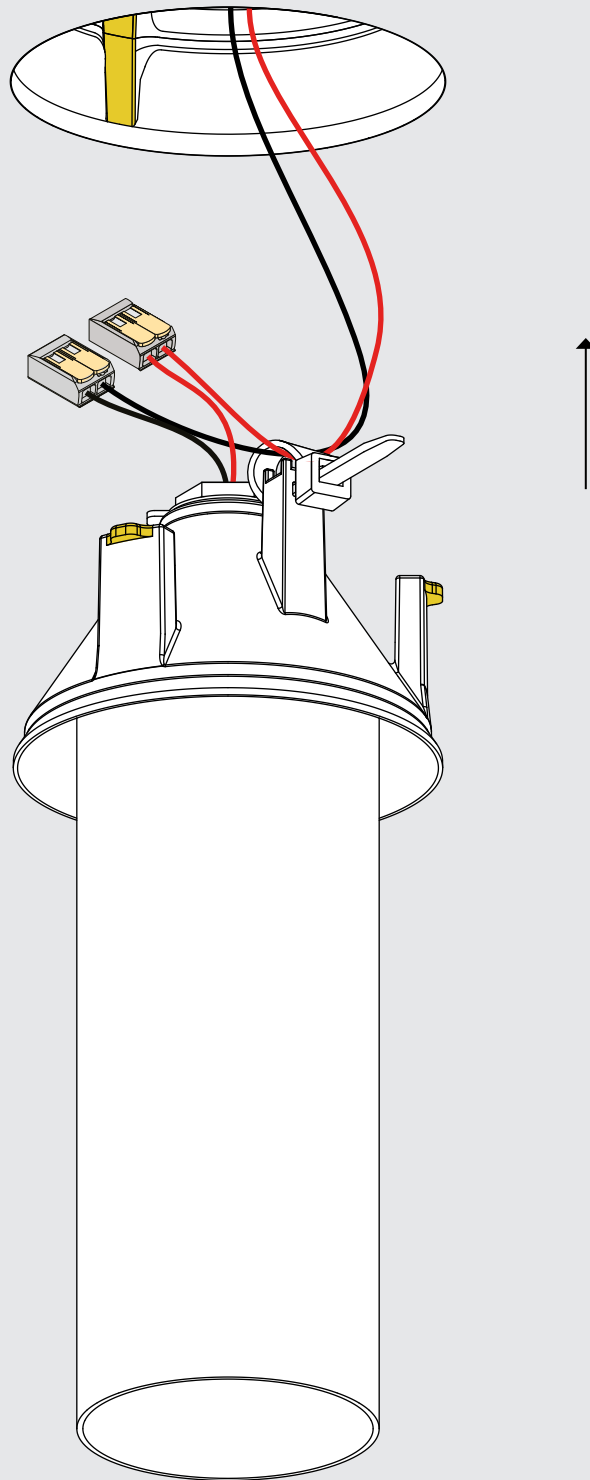

Insert the luminaire into the installation ring. Make sure the ribs of the luminaire match the recesses of the installation ring.

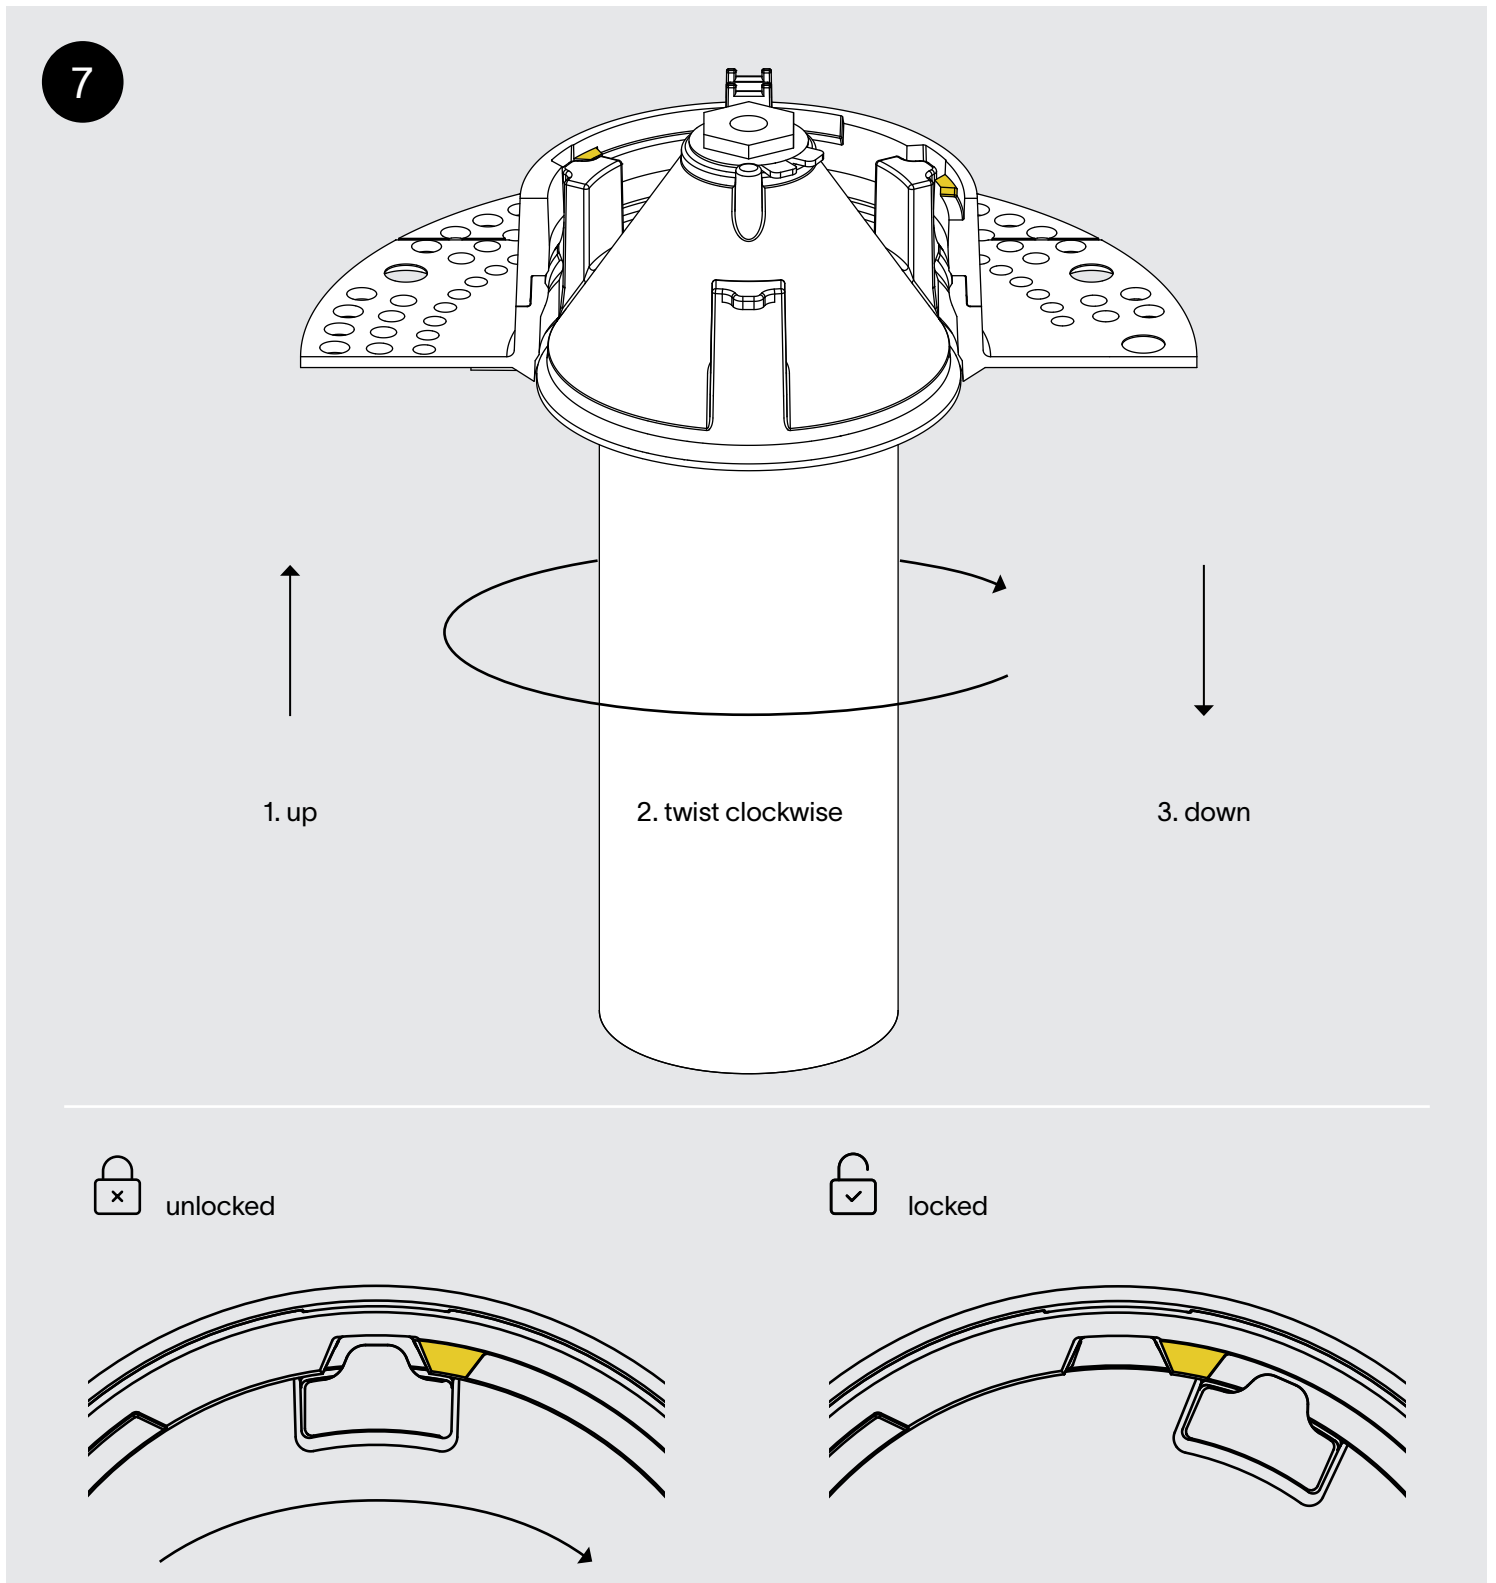

Push the luminaire a little higher and twist it clockwise to lock it. Gently pull the luminaire down again. Now it's locked.

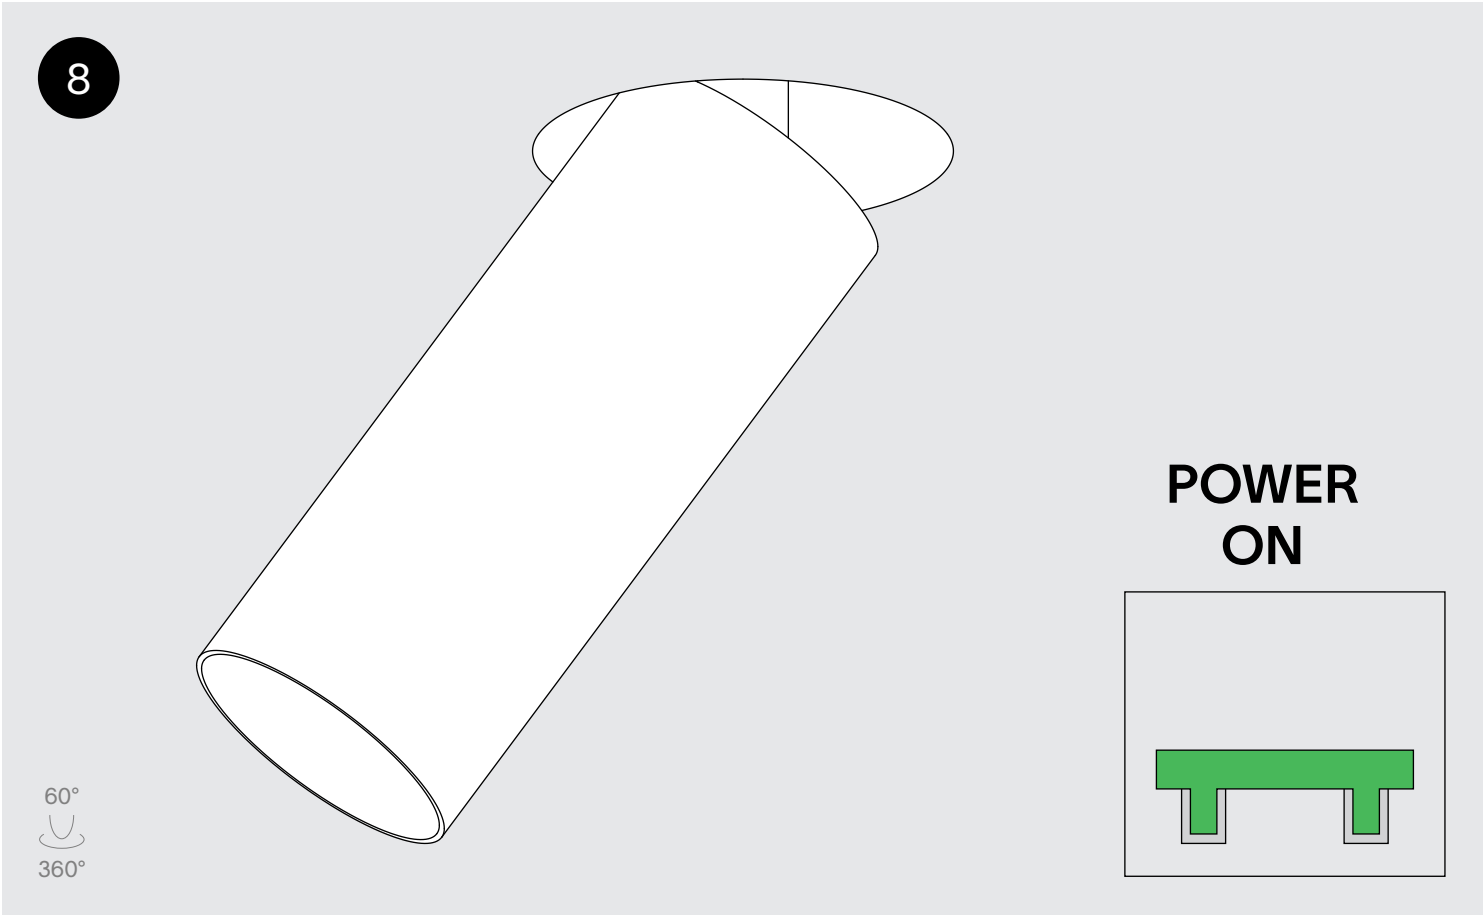

Twist the luminaire as desired. Turn the power back on.

thank you for choosing prado

		Replace glass lense when broken. Luminaire shall only be used together with glass lens.
--	--	--



prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.